

Channel	Value	Control
1 Channel	0	Stop
	1-255	Adjustment for Motor X moving
2 Channel	0	Stop
	1-255	Located adjustment for Motor X
3 Channel	0	Stop
	1-255	Adjustment for Motor Y moving
4 Channel	0	Stop
	1-255	Located adjustment for Motor Y
5 Channel	0	Close
	1-255	General dimmer control,brightness is from dark to bright.
6 Channel	0	Close
	1-255	Red color control,brightness is from dark to bright.
7 Channel	0	Close
	1-255	Green color control,brightness is from dark to bright.
8 Channel	0	Close
	1-255	Blue color control,brightness is from dark to bright.
9 Channel	0	Close
	1-255	White/Amber color control,brightness is from dark to bright.
10 Channel	0-9	Close
	10-255	Adjustment for 32 kinds of mixed color
11 Channel	0-9	Close
	10-255	Strobe control,strobe is from slow to fast.
12 Channel	0-127	Close
	128-255	Sound control of DMX controller is open.

## Safety instruction

### CAUTION!

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!

# User Manual

## RGBA/W MINI MOVING HEAD

Professional Entertainment Equipment

## Features

Voltage: AC110-240V 50/60Hz

Power: 75W

Light source: 7\*10W RGBA/W LED( 4 IN 1)

DMX Channel: 7/12 CH

4 operation modes: Automatic running, DMX, Sound Active, Master/Slave

Weight: 5.0 kgs

## Control

### DMX Control Instruction

Display	Function
ADDR	A001-A512
CHND	7CH/12CH
SLND	NAST(Master)
	SL 1 (Slave 1)
	SL 2 (Slave 2)
SOUN	0-100(set up the sensitivity of sound control)
AUTO	NO/YES(Set up the Auto mode)
STBY	NO/YES(Set up the pause mode for the beginning)
PAN	NO/YES (Set up positive and negative moving for Motor X)
TILT	NO/YES (Set up positive and negative moving for Motor Y)
LED	ON/OFF(Set up powr in and power off)
DISP	Set up positive and negative direction
TEST	Self-checking function
HOURL	Work time
RSET	Self-checking reset

### Notice:

1. When power in,the display is rolling with "LED-RGBW".

2. Mixed color adjustment:

First,press "Menu" Button to enter in menu choose mode,then press "Eneter"button for about 5 seconds, display "BALA" will bring you into mixed color menu.And the led display will keep flicking.Press "Enter" button again,you can enter in mixed color adjustment directly.

RED(0-255)GREE(0-255)BLUK(0-255)WHIT(0-255)

### DMX channel display:

#### 7 Channel:

Channel	Value	Control
1 Channel	0	Stop
	1-255	Adjustment for Motor X moving
2 Channel	0	Stop
	1-255	Adjustment for Motor Y moving
3 Channel	0-10	Close
	11-255	General dimmer control,brightness is from dark to bright.
4 Channel	0	Close
	1-255	Red color control,brightness is from dark to bright.
5 Channel	0	Close
	1-255	Green color control,brightness is from dark to bright.
6 Channel	0	Close
	1-255	Blue color control,brightness is from dark to bright.
7 Channel	0	Close
	1-255	White/Amber color control,brightness is from dark to bright.

#### 12 Channel:

